

ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	JH	KB	3178	05/03/24	First Issue
b	FT	KB	3302	10/07/24	Added arial bracket steps
c	YZL	KB	3331	29/08/24	Updated Arial Bracket steps to include new parts.
d	CJT	KB	3774	18/08/26	Parts replaced
e					
f					
g					
h					
i					
j					
k					
l					
m					


TF2PR/FL KammBar
Instructions

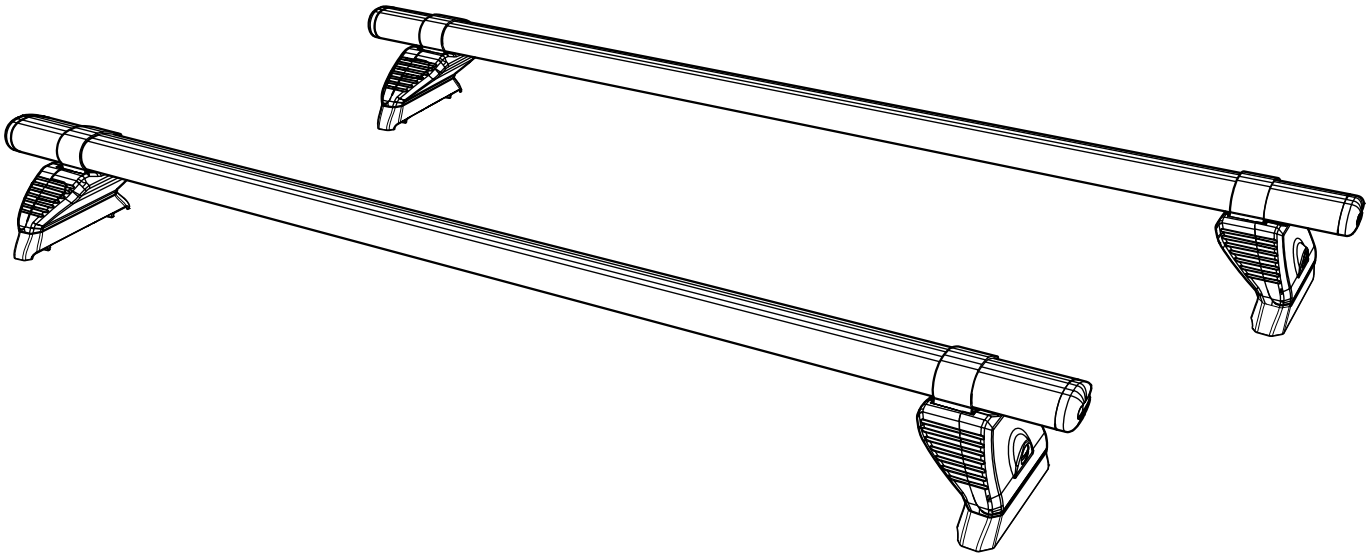


CITY CRASH
According to ISO/ PAS 11154:2006

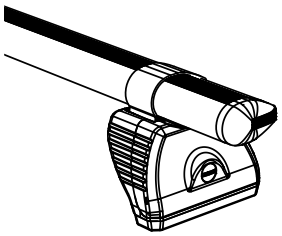



KammBar Pro & Black x 1
2.2kg/4.9lbs
Max
75kg/165lbs

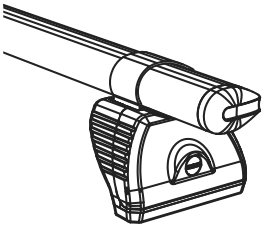


KammBar Fleet x 1
2.5kg/5.5lbs
Max
50kg/110lbs

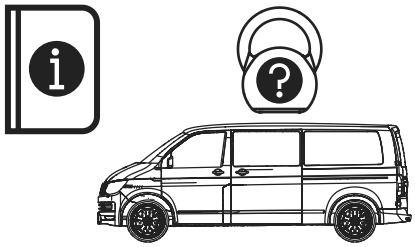

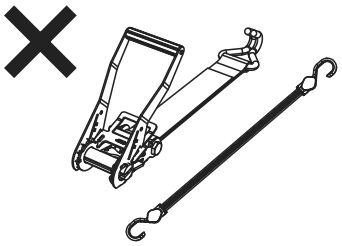


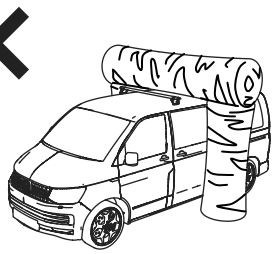


KammBar Pro & Black

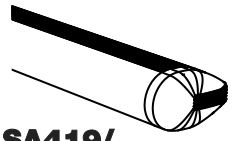

SA419/ SA536 x 2 ☐

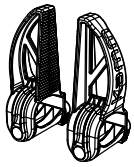

KLS2 x 1 ☐

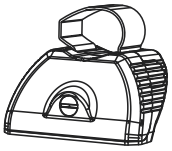


SA397 x 2 ☐




SA398 x 2 ☐


KammBar Fleet

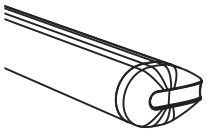


SA393 x 2 ☐




C04 x 2
optional upgrade

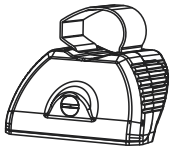


SA397 x 2 ☐

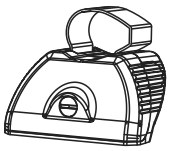


SA398 x 2 ☐

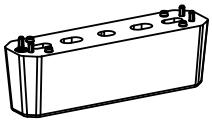


PS325 x 2 ☐

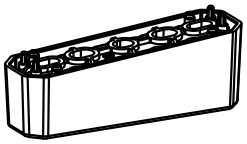


PS626 x 2 ☐




PS046 x 4 ☐



FS102
(M6 x 75)
x 8 ☐

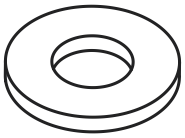


FW001 (M6) x 8 ☐

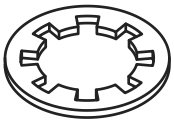


FW008 (M6) x 8 ☐




FT01 x 1 ☐

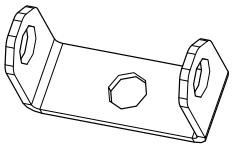


MS2007 x 1 ☐




FN029 x 1 ☐




FS156 x 1 ☐
M5 x 8mm




FS311 x 1
M5 x 25mm ☐




TP158 x 1 ☐

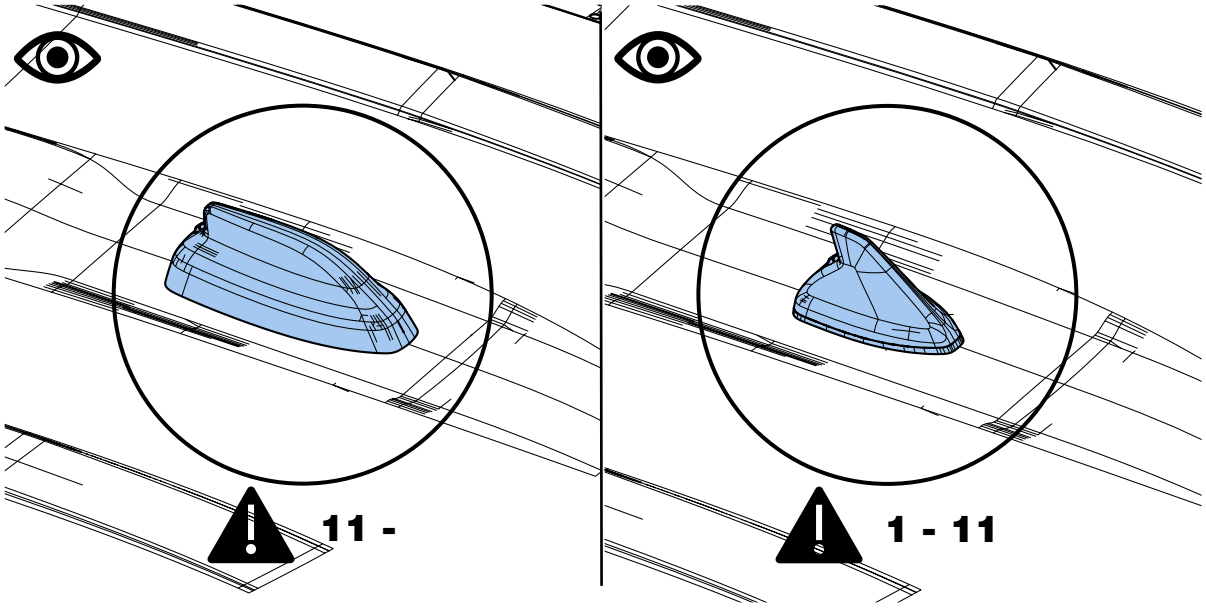


1.

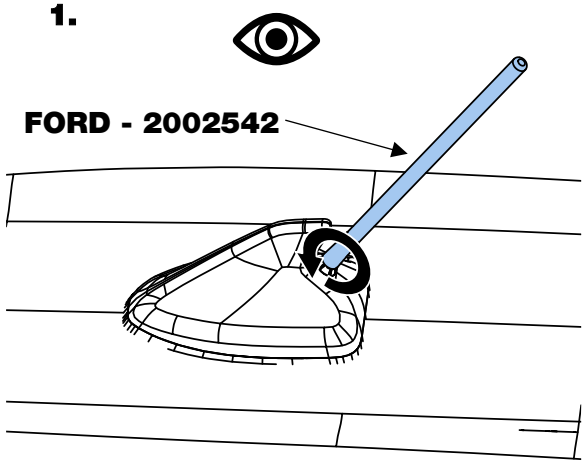


2.

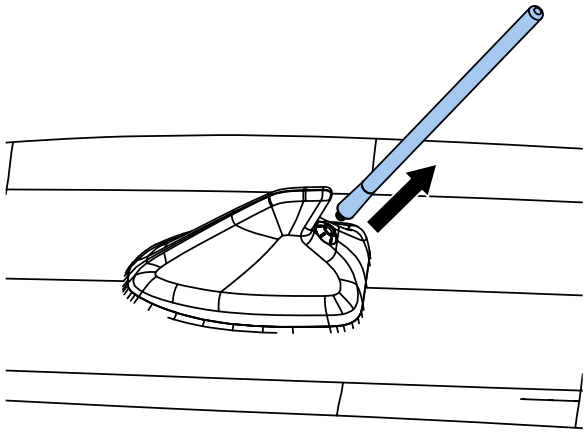


3.

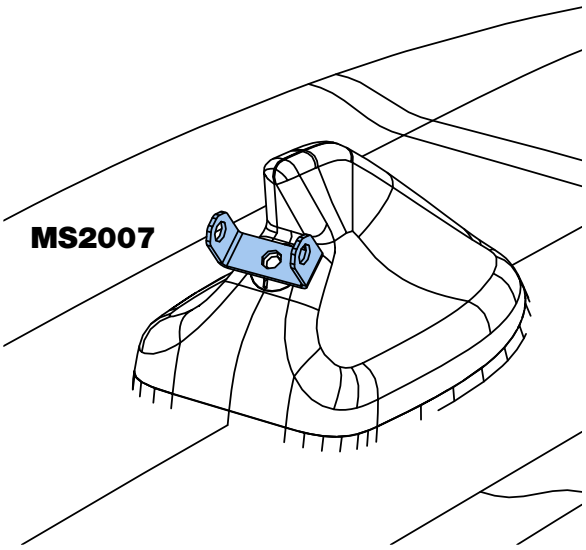


4.

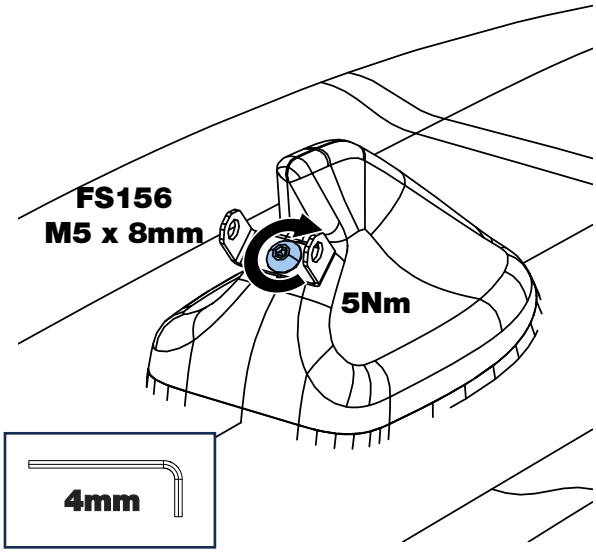


5.

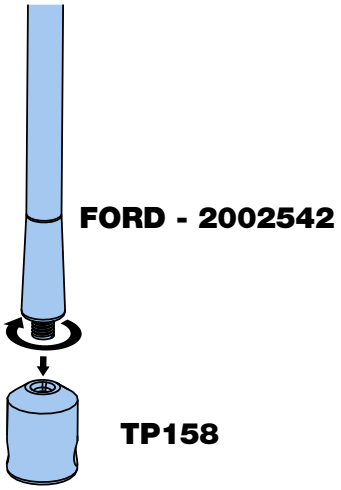
FORD - 2002542
TP158


6.

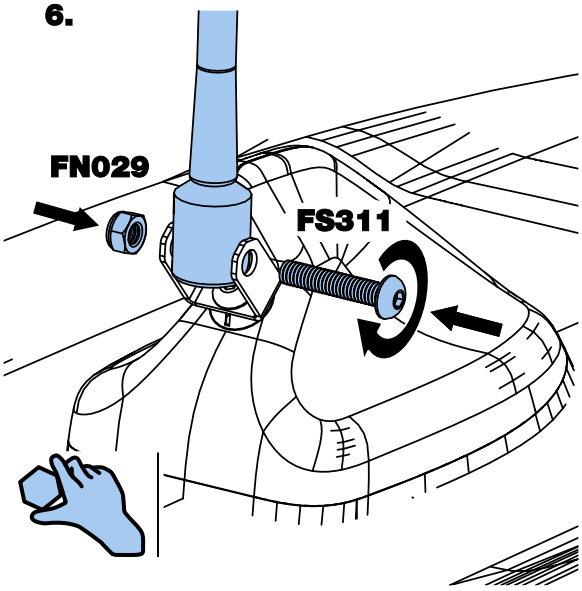
FN029
FS311


9a.

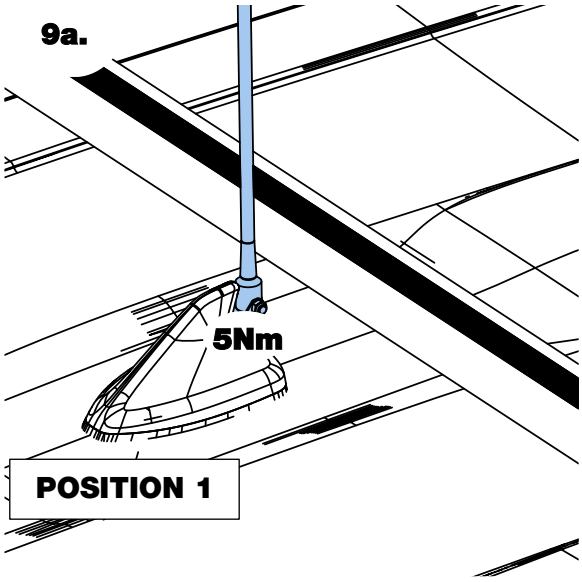
5Nm
POSITION 1


9b.

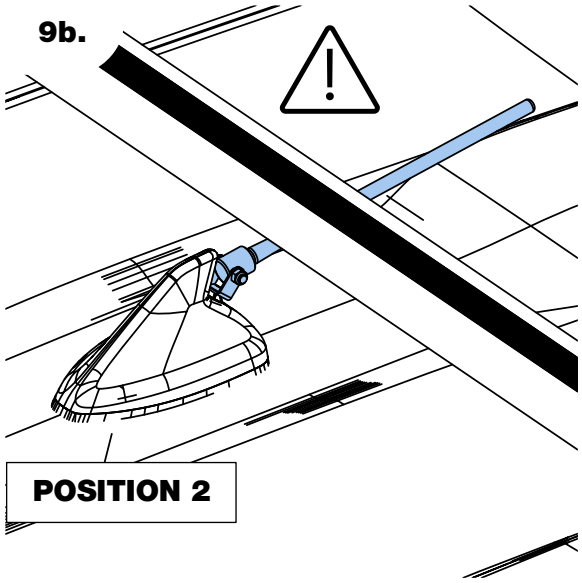
POSITION 2


10.

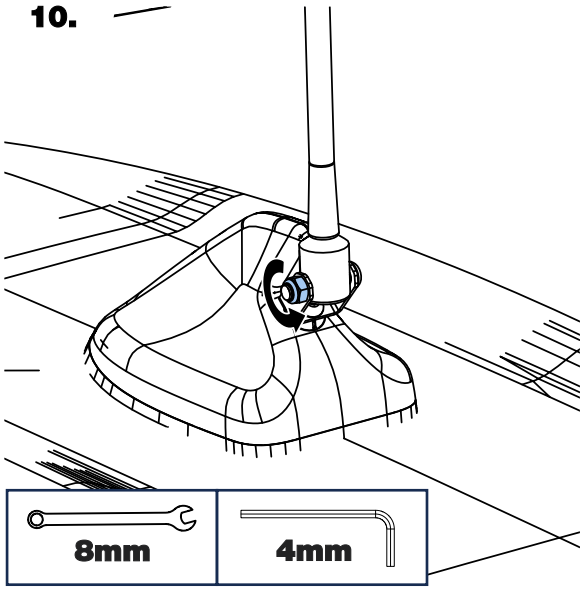
8mm
4mm


11.

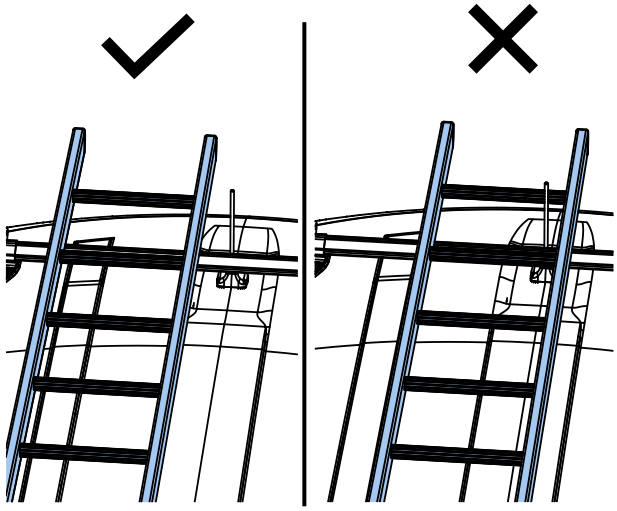


12.

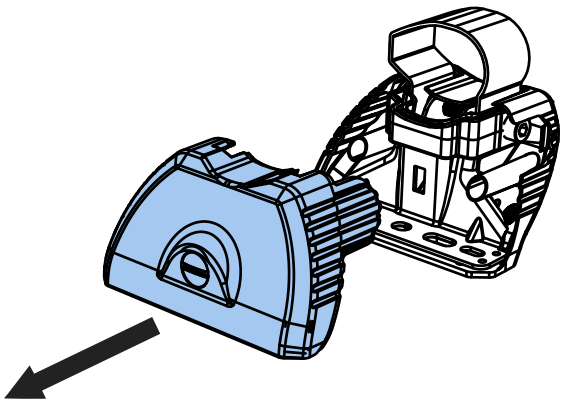


13.

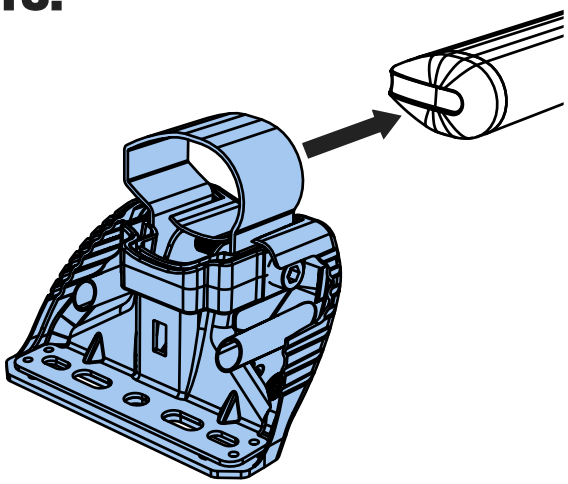


14.

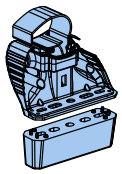


SA397
PS325

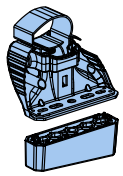


SA397
PS626

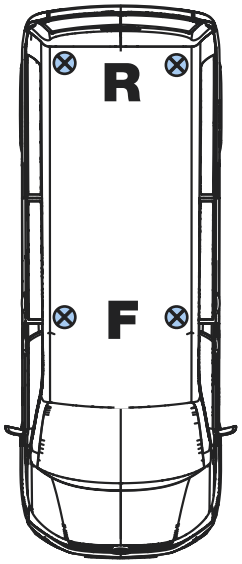

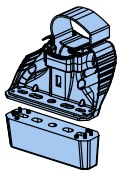


SA397
PS325

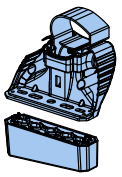


SA397
PS626


15.

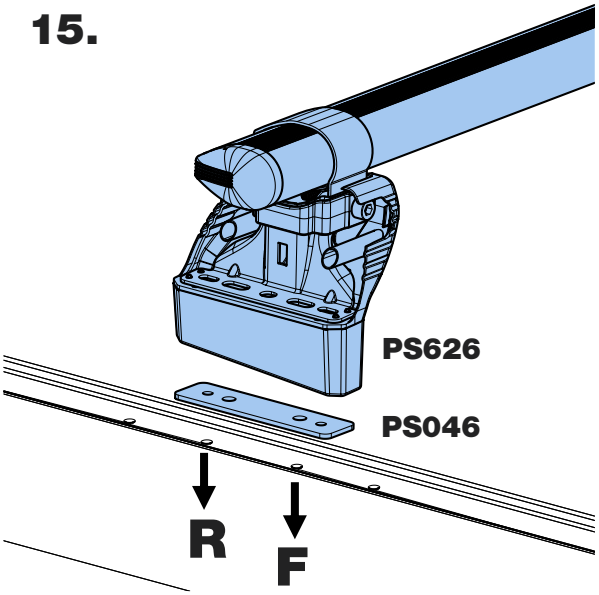


16.

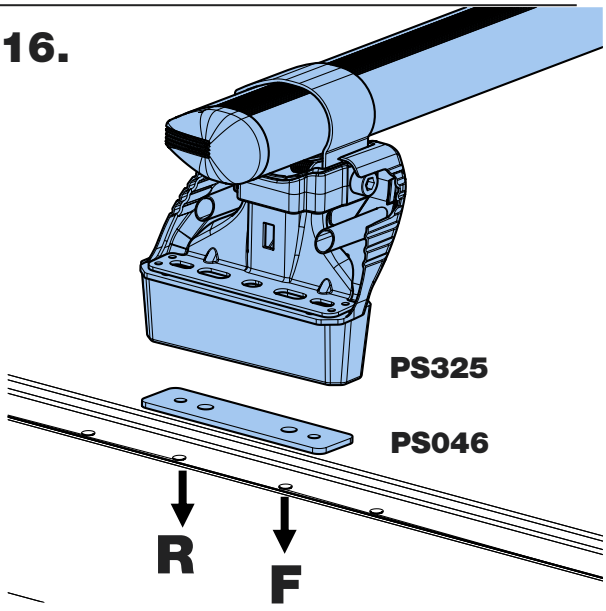


17.

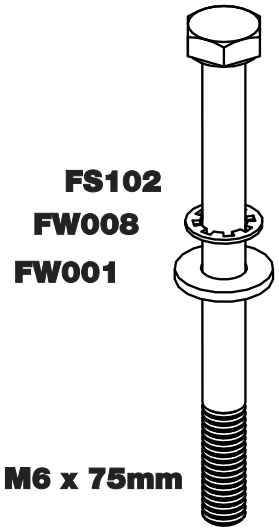


18.

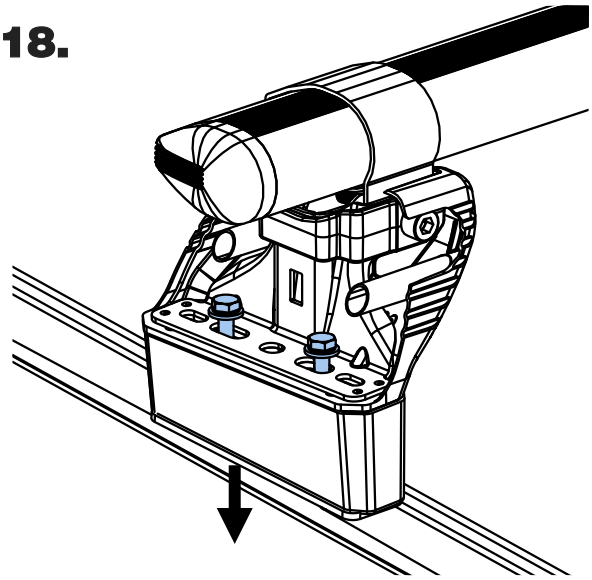


19.

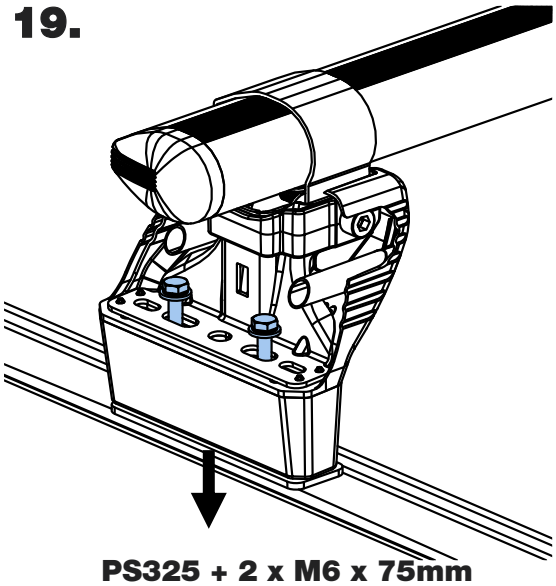


20.

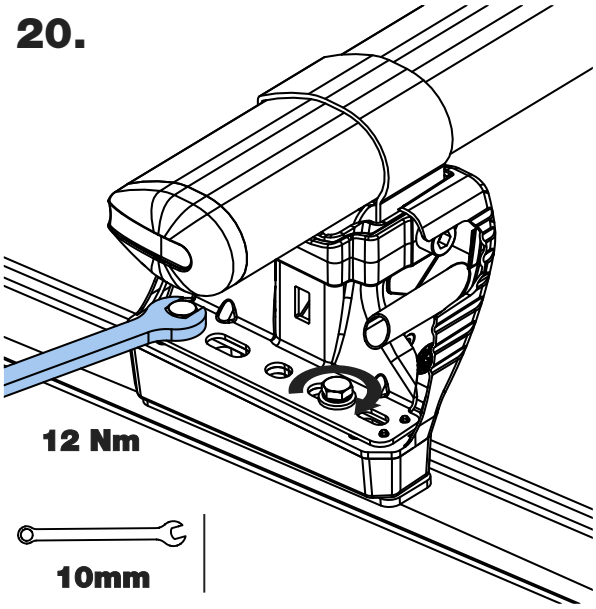


21.

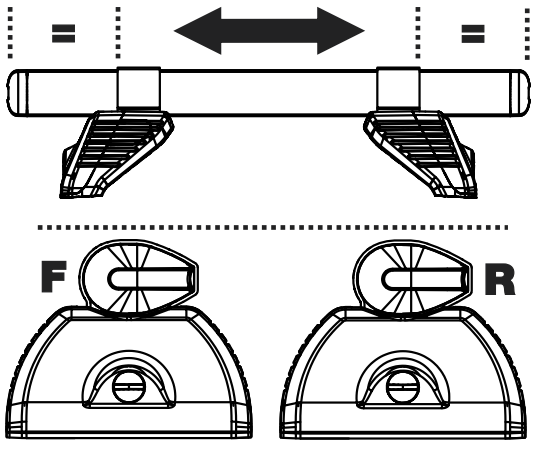

22.

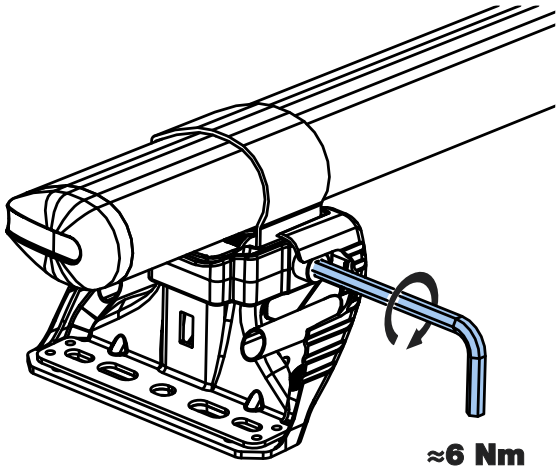

23.

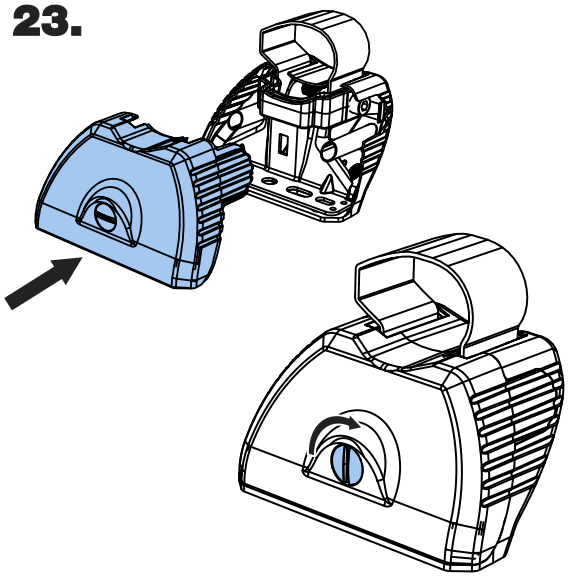

24.

