
| ISSUE: | DRAWN BY: | CHECKED BY: | CRF No: | DATE: | DESCRIPTION: |
|---|---|---|---|---|---|
| a | FT | KB | 3643 | 04/02/26 | First Release |
| b | K-AO | KB | 3820 | 25/09/26 | FK1308 Removed and made available as optional purchase. Views added to convey clearness of Rear installation |
| c | | | | | |
| d | | | | | |
| e | | | | | |
| f | | | | | |
| g | | | | | |
| h | | | | | |
| i | | | | | |
| j | | | | | |
| k | | | | | |
| l | | | | | |

Rhino

# YA4KR KammRack.


## Instructions

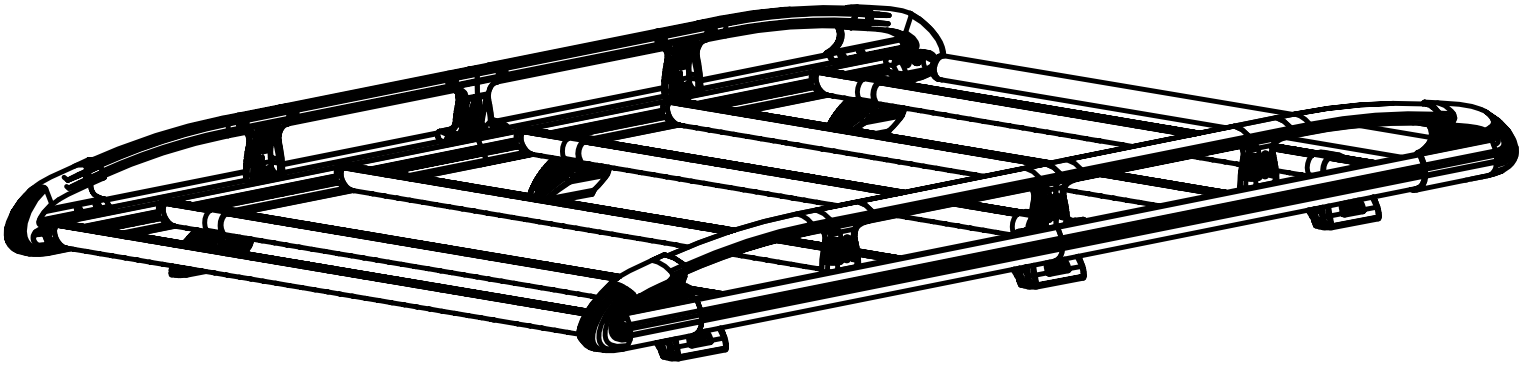



CITY CRASH
According to ISO/ PAS 11154:2006

**YA4KR:**


**Kia** PV5 2026-

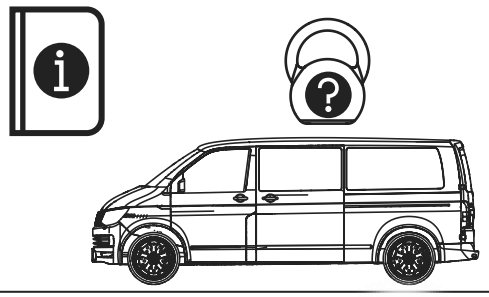

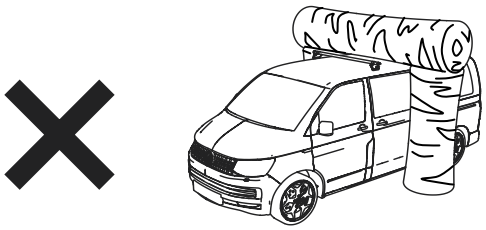


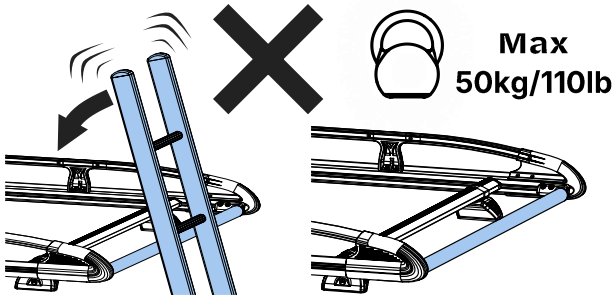



## KammRack

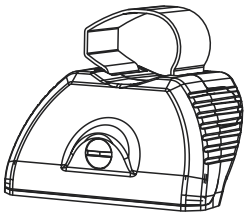


**SA397U x 4** ☐

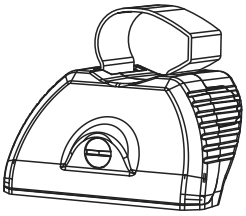


**SA398U x 4** ☐

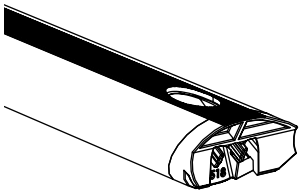


**SA430 x7** ☐

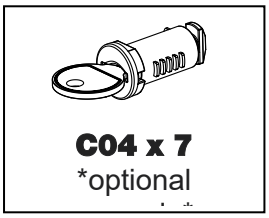


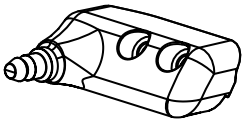
**PS519 x 1** ☐

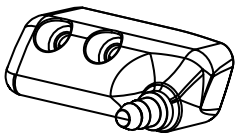

**PS520 x 1** ☐

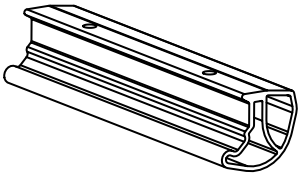


**EXT15-02** ☐

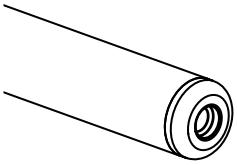

**SA437 x 1** ☐


**LHS x 2**

**RHS x 2**

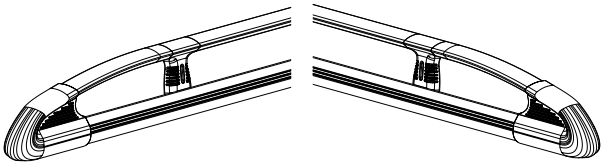


**ASF x 1** ☐


## Fitting Kit




PS319 x 2 ☐

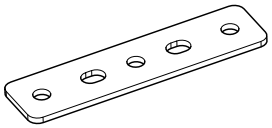


PS023 x 6 ☐




PS602 x 2 ☐

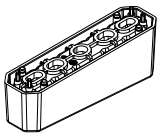

PS626x 2 ☐




PS404 x 2 ☐




PS178 x 2 ☐



FN006 (M8) x 4 ☐




FW002 (M8) x 18 ☐




FW020 (M8) x 10 ☐




PS414 (M8) x 4 ☐




FS107 (M8 x 75) x 4 ☐




FS061 (M8 x 35) x 6 ☐

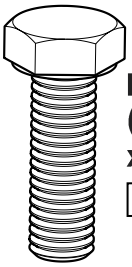


FS015 (M8 x 25) x 4 ☐

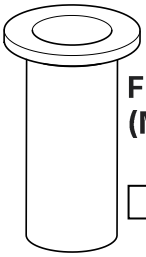


FN079 (M8) x 4 ☐




FS059 (M8 x 25) x 18 ☐

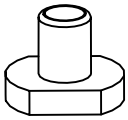


FN085 x 18 ☐



SW543 x 2 ☐

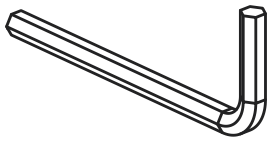


FT01 x 1 ☐

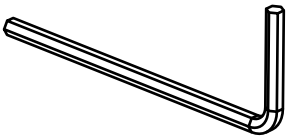


FT05 x 1 ☐


1.

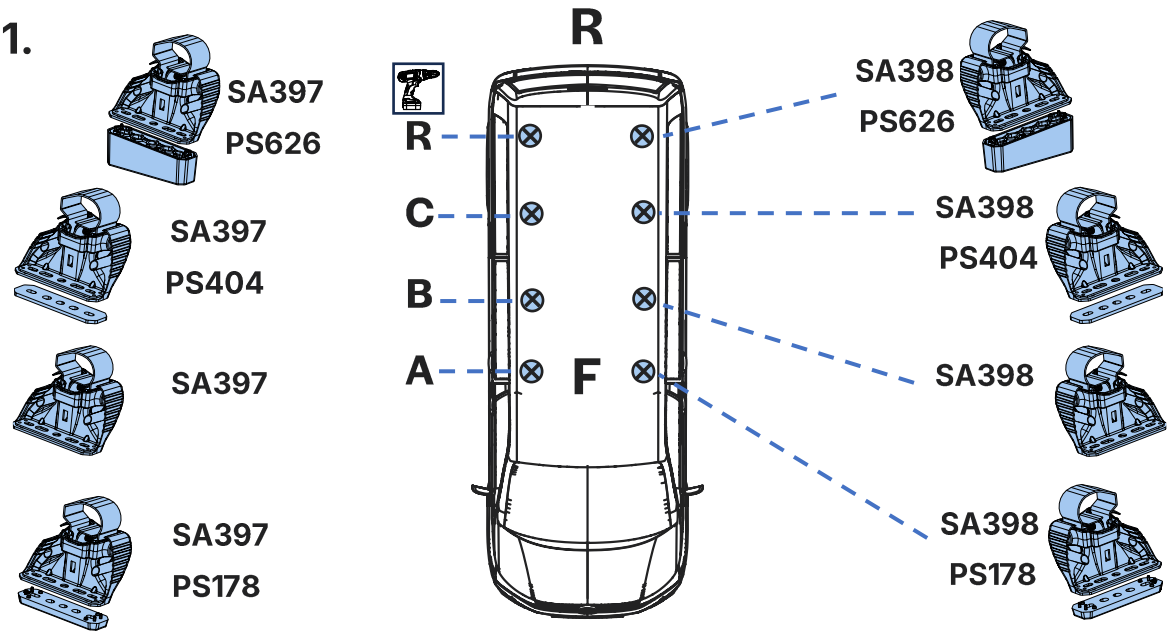
SA397
PS626
SA397
PS404
SA397
SA397
PS178
R
R
C
B
A
F
SA398
PS626
SA398
PS404
SA398
SA398
PS178


2.

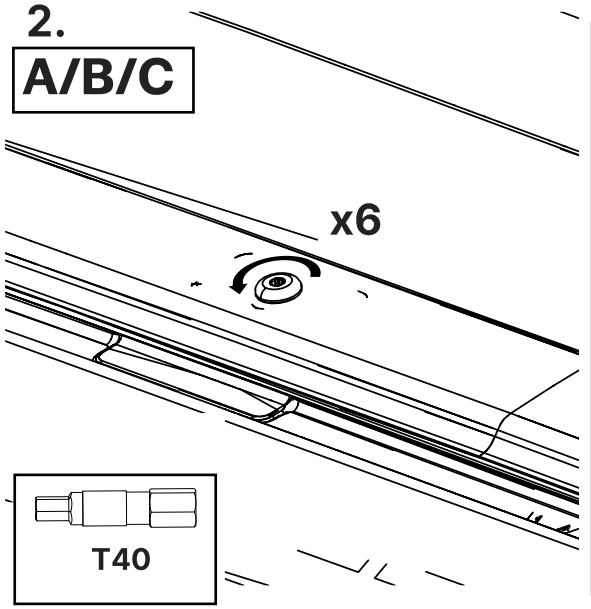
A/B/C
x6
T40


3.

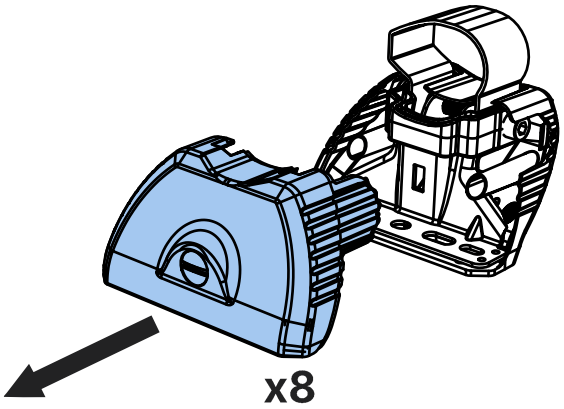

x8

4.

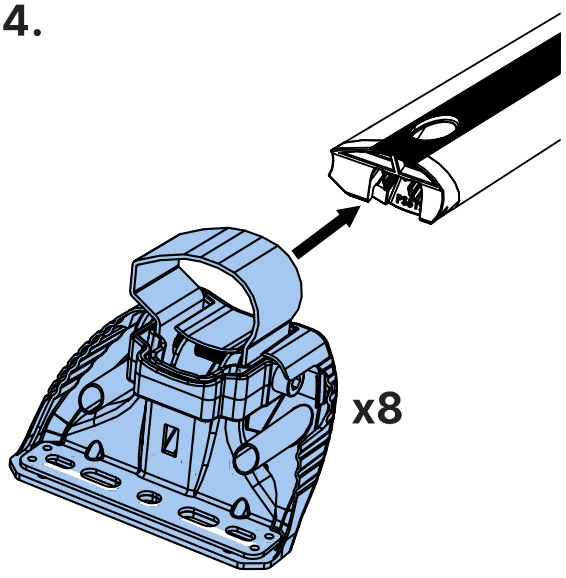

x8

5.

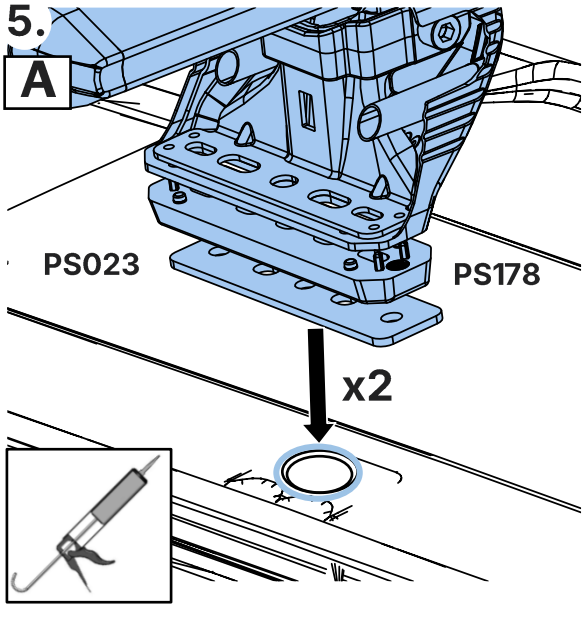

A
PS023
PS178
x2

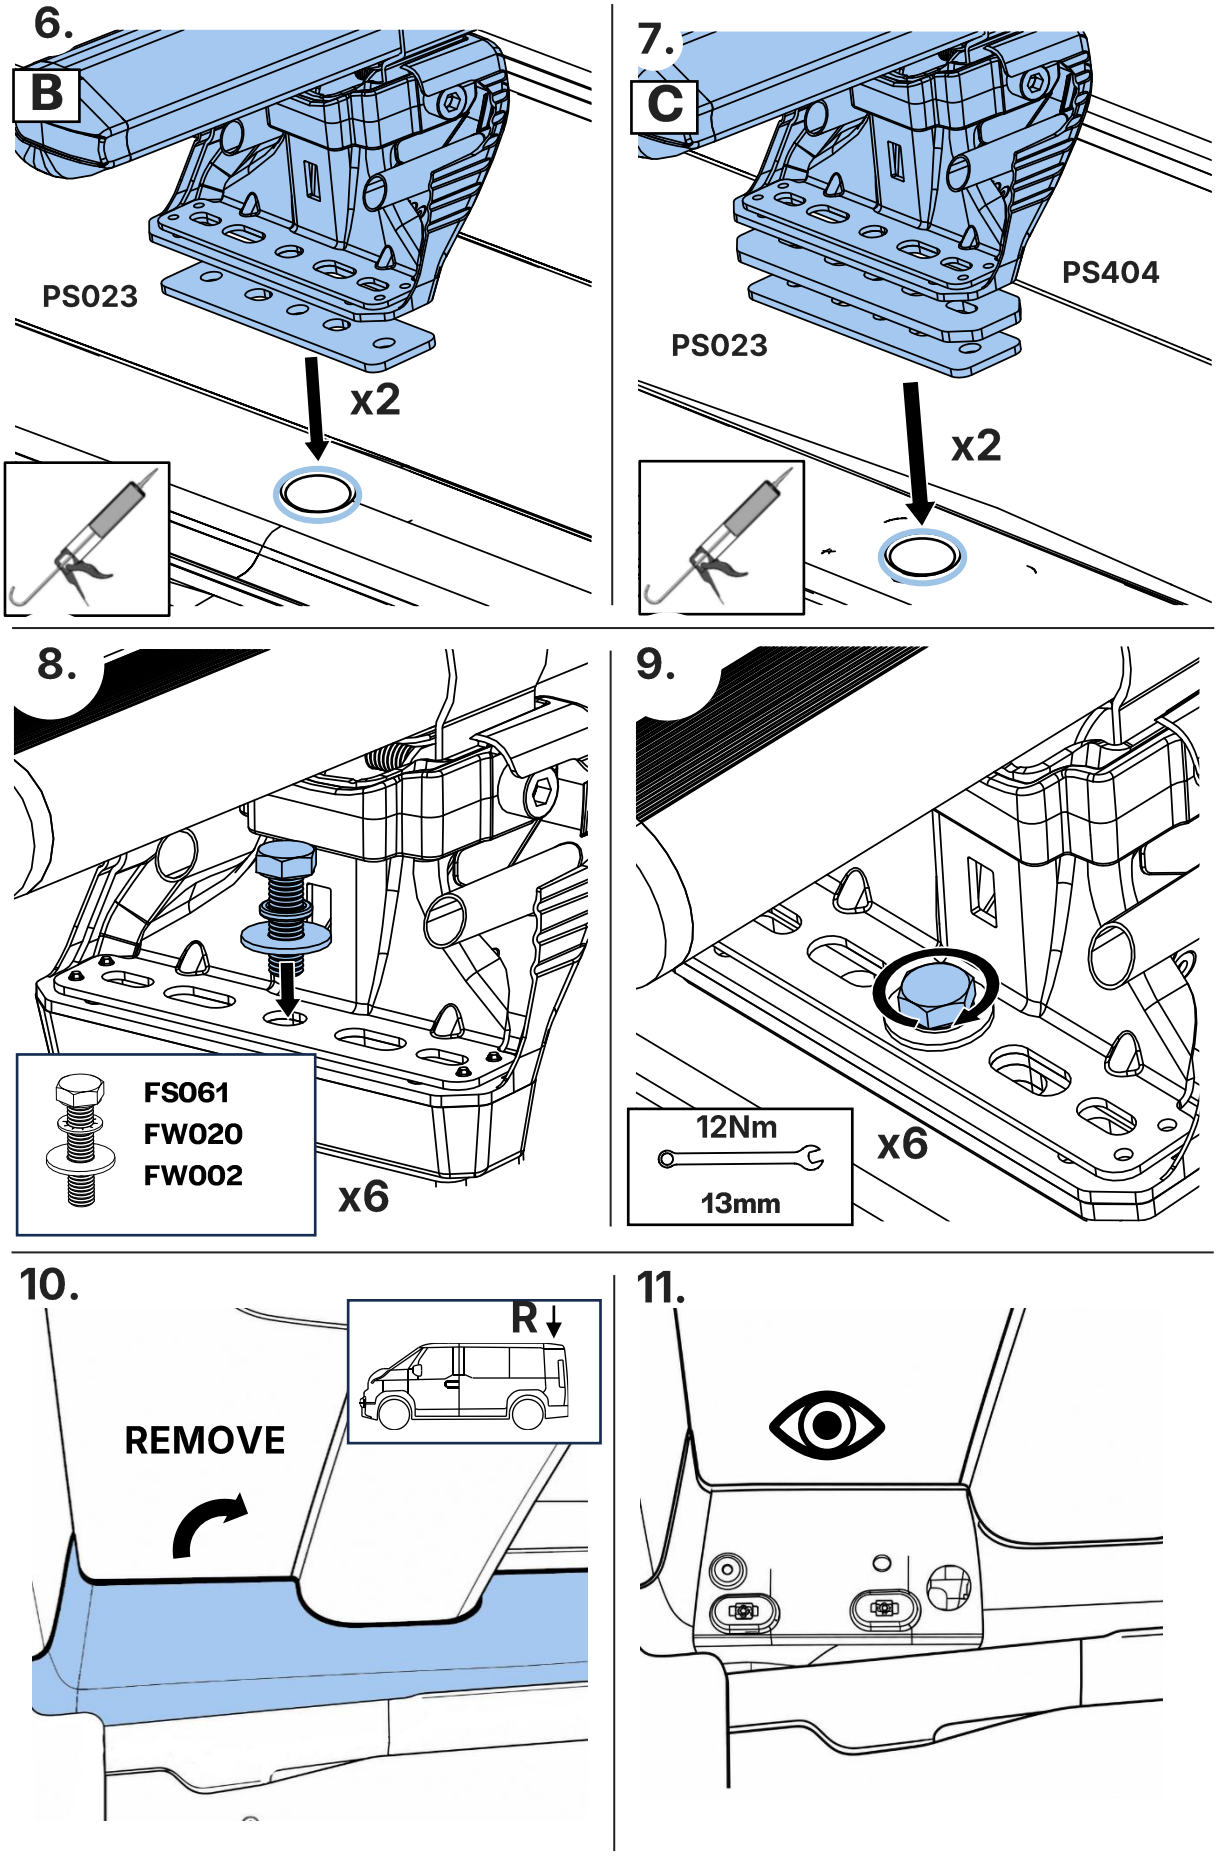
6.
B
PS023
x2
7.
C
PS404
PS023
x2
8.
FS061
FW020
FW002
x6
9.
12Nm
13mm
x6
10.
R
REMOVE
11.


12.

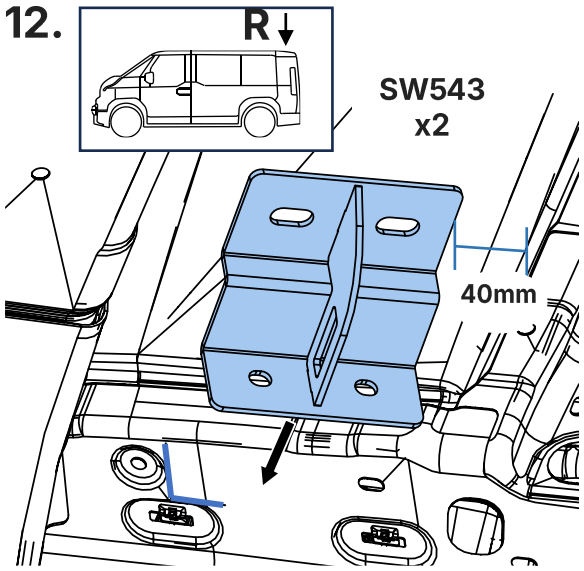



13.

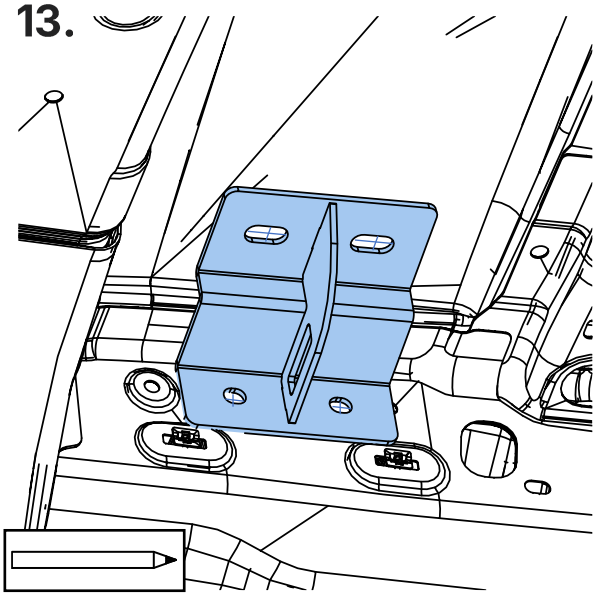


14.

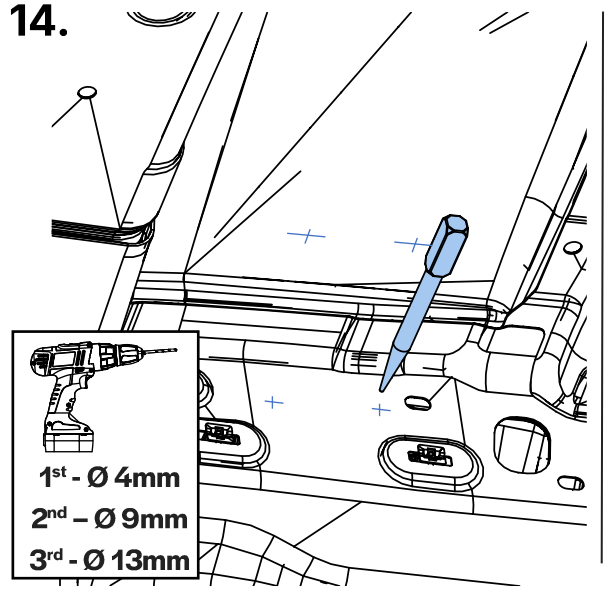


15.

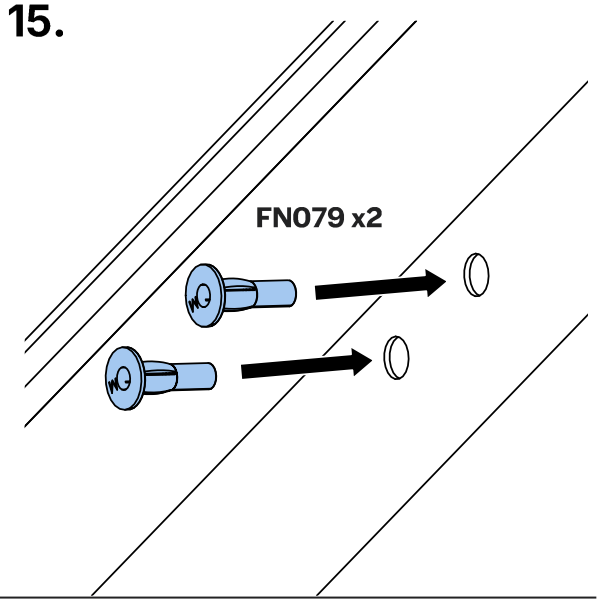



16a.

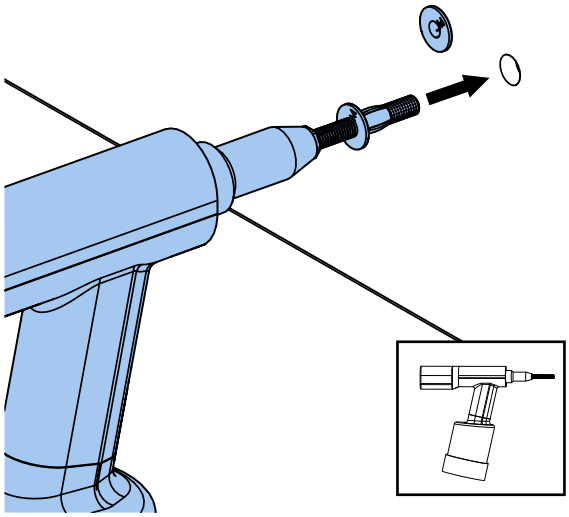


| | |
|---|---|
| | **Option 1:** Use Rivet Gun & M8 XL Mandrel. |
| | **Option 1:** Benutzen Sie eine Nietpistole & einen M8 XL Zugdorn. |
| | **Option 1 :** Utiliser un pistolet à riveter et un mandrin M8 XL. |
| | **Opzione 1:** utilizzare una pistola per rivetti e un mandrino M8 XL. |
| | **Opción 1:** Use la remachadora y el cabezal M8 XL. |
| | **Opcja 1:** należy użyć nitownicy z trzpieniem M8 XL. |
| | **Optie 1:** Gebruik Klinknagelpistool & M8 XL Opspandoorn. |
| | **1. opció** Használjon szegecselő pisztolyt és M8 XL tüskét. |
| | **Alternativ 1:** Använd en nitpistol och en M8 XL borradapter. |
| | **Varianta 1:** Použijte nýtovací kladivo a trn M8 XL. |
| | **Vaihtoehto 1:** Käytä niittivasaraa ja M8 XL -tuurnaa. |
| | **Alternativ 1:** Bruk naglepistol og M8 XL-mandreng. |
| | **Možnosť 1:** Použite nitovaciu pištoľ a tŕň M8 XL. |

## 16b.

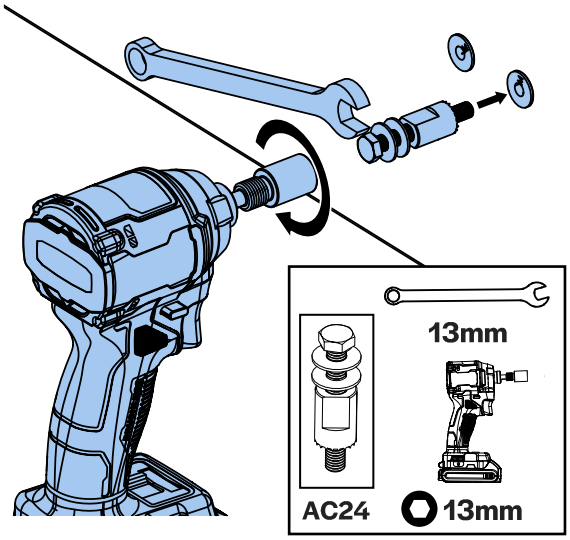



| | |
|---|---|
| | **Option 2:** Use Impact Driver. |
| | **Option 2:** Benutzen Sie einen Schlagschrauber. |
| | **Option 2 :** Utiliser une clé à choc. |
| | **Opzione 2:** utilizzare l'avvitatore a percussione. |
| | **Opción 2:** Use el atornillador de impacto. |
| | **Opcja 2:** należy użyć wkrętarki udarowej. |
| | **Optie 2:** Gebruik Slagschroevendraaier. |
| | **2. opció** Használjon ütvefúrót. |
| | **Alternativ 2:** Använd en slagborrmaskin. |
| | **Varianta 2:** Použijte příklepový utahovák. |
| | **Vaihtoehto 2:** Käytä iskuväännintä. |
| | **Alternativ 2:** Bruk slagskrutrekker. |
| | **Možnosť 2:** Použite elektrický uťahovák. |

## 16c.

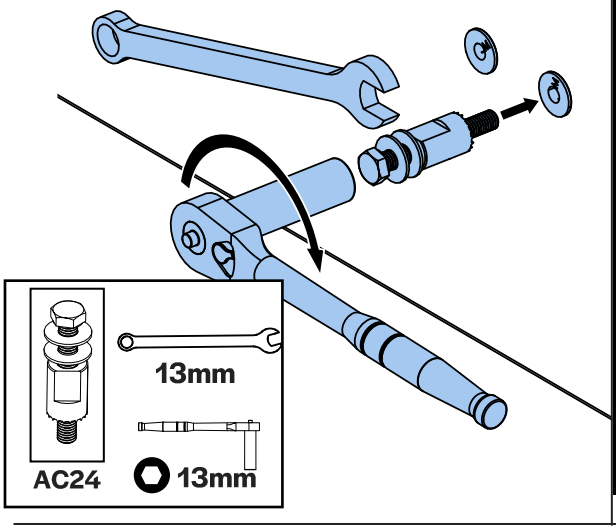



| | |
|---|---|
| | **Option 2:** Use Impact Driver. |
| | **Option 2:** Benutzen Sie einen Schlagschrauber. |
| | **Option 2 :** Utiliser une clé à choc. |
| | **Opzione 2:** utilizzare l'avvitatore a percussione. |
| | **Opción 2:** Use el atornillador de impacto. |
| | **Opcja 2:** należy użyć wkrętarki udarowej. |
| | **Optie 2:** Gebruik Slagschroevendraaier. |
| | **2. opció** Használjon ütvefúrót. |
| | **Alternativ 2:** Använd en slagborrmaskin. |
| | **Varianta 2:** Použijte příklepový utahovák. |
| | **Vaihtoehto 2:** Käytä iskuväännintä. |
| | **Alternativ 2:** Bruk slagskrutrekker. |
| | **Možnosť 2:** Použite elektrický uťahovák. |


## 17.

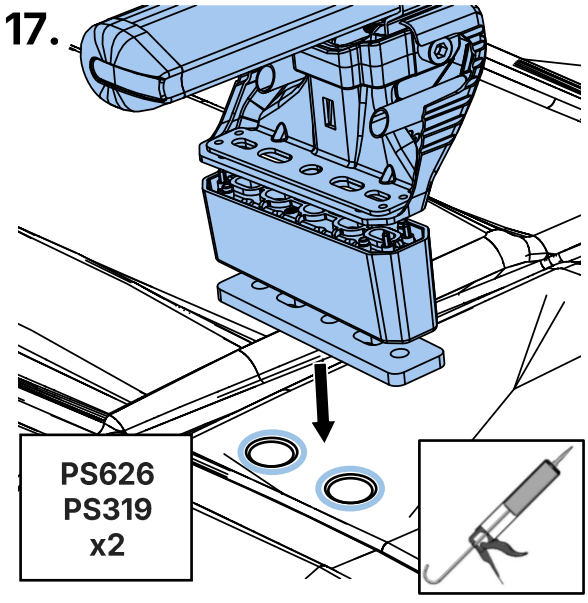



## 18.

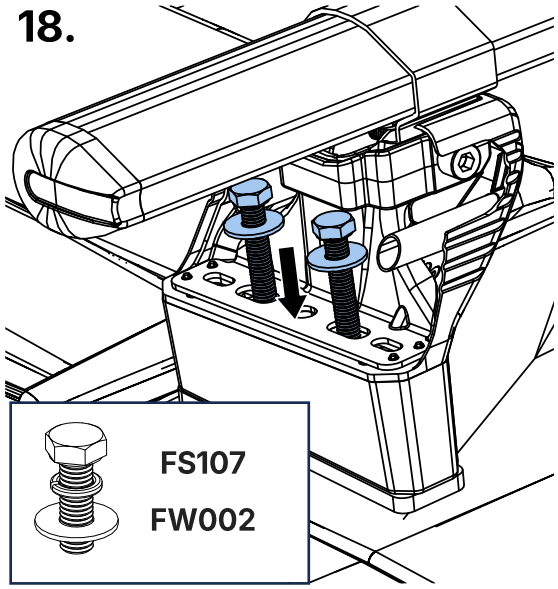


19.

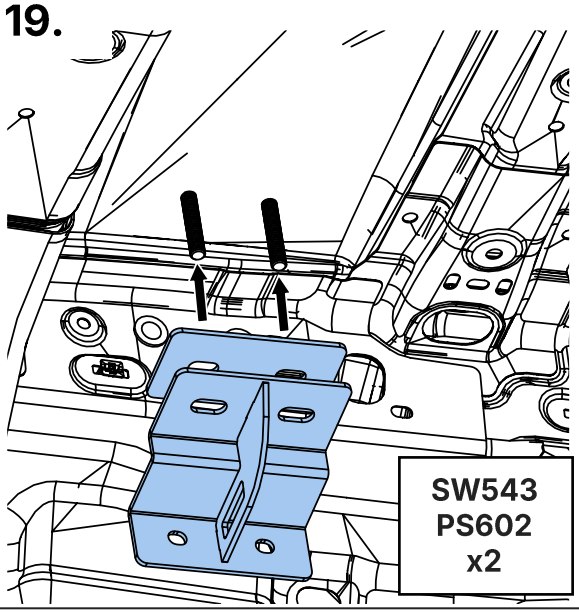



20.

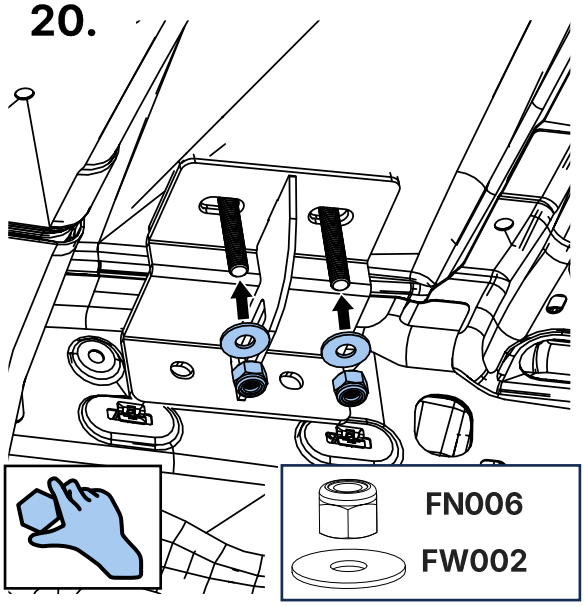



21.

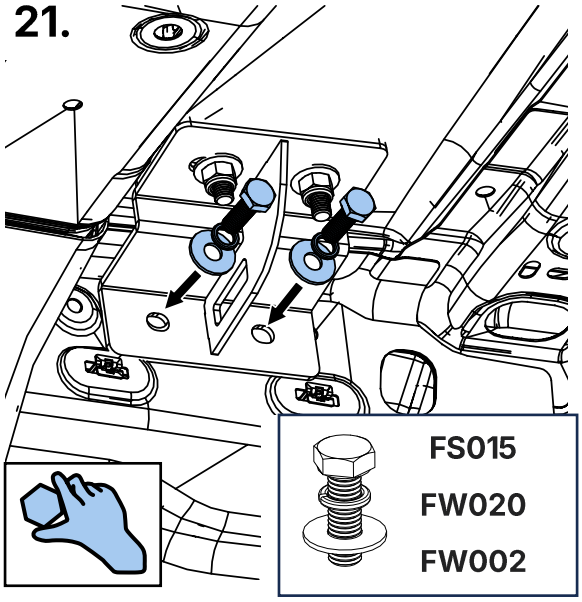



22.

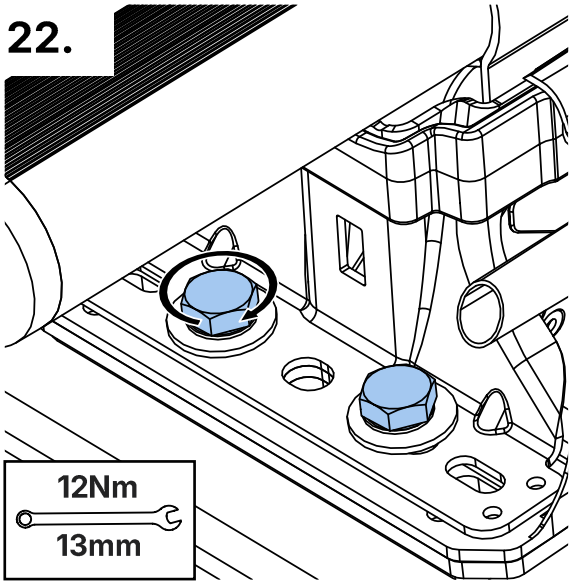



23.

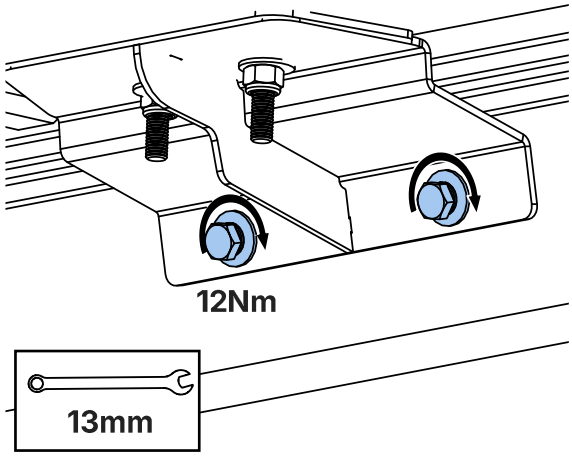



24.

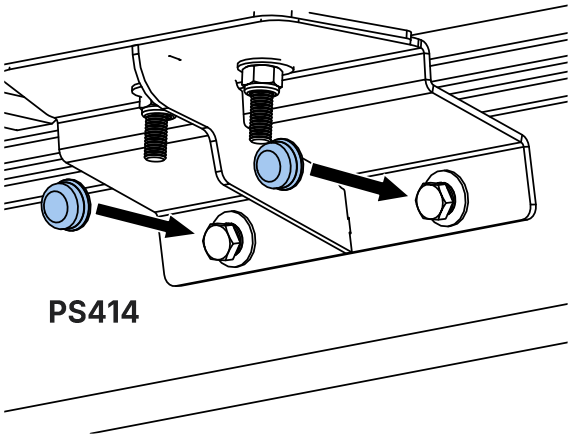


25.

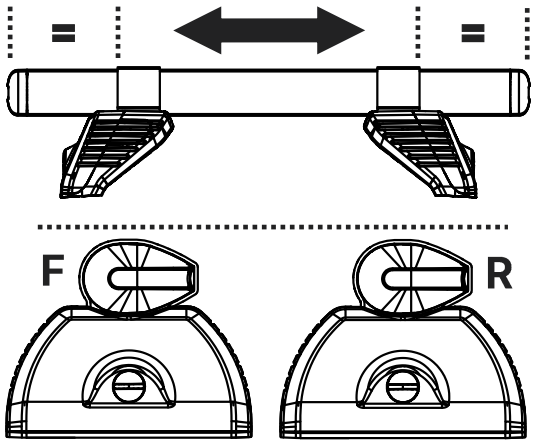



26.

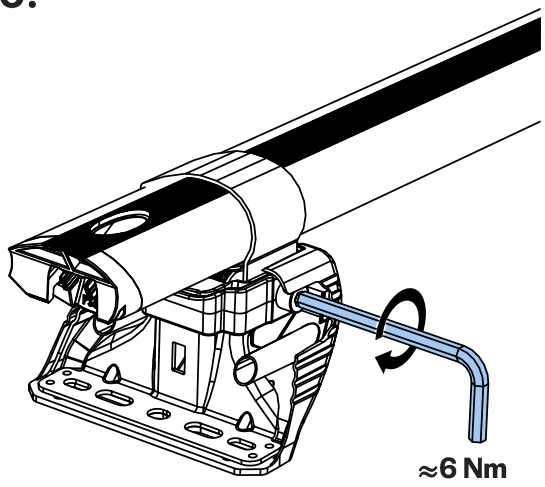



27.

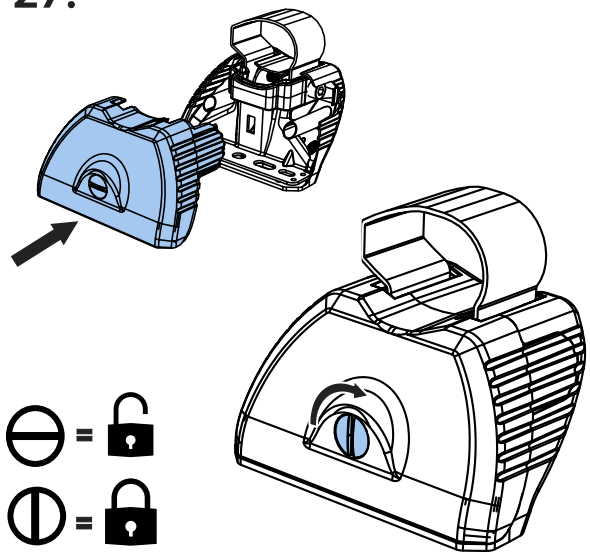


28.

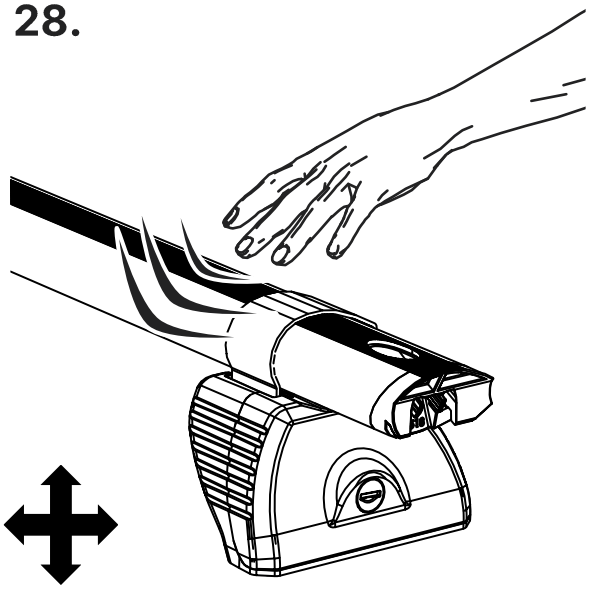



## K699- Kia, PV5, 2026- L2, H1, Twin Doors

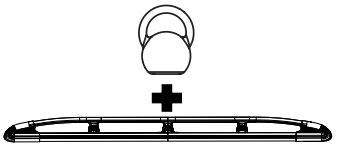

38kg/84lbs


75kg
Max

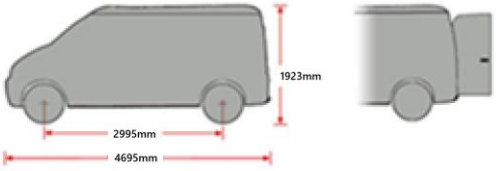

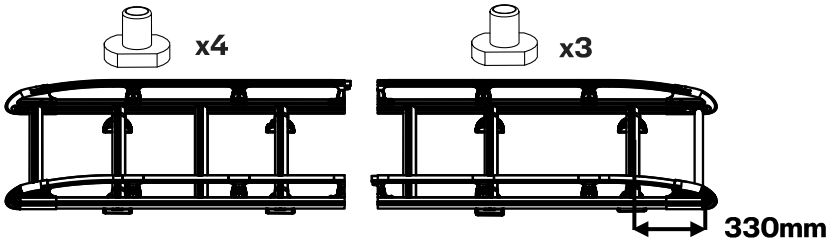





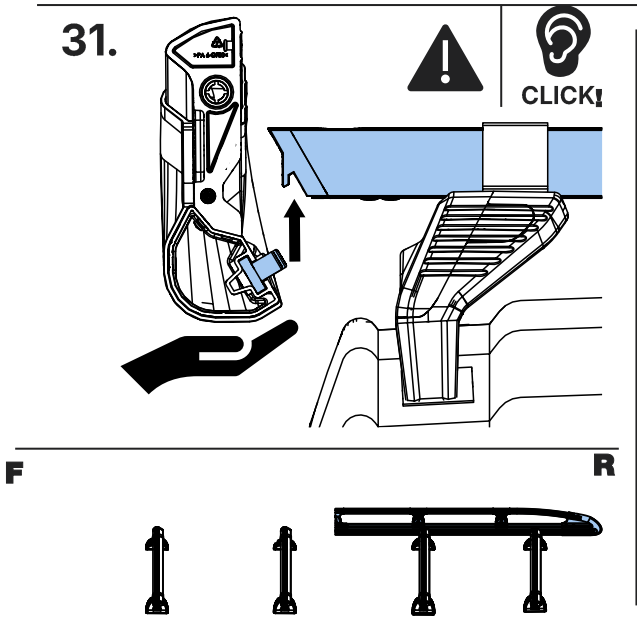

29.

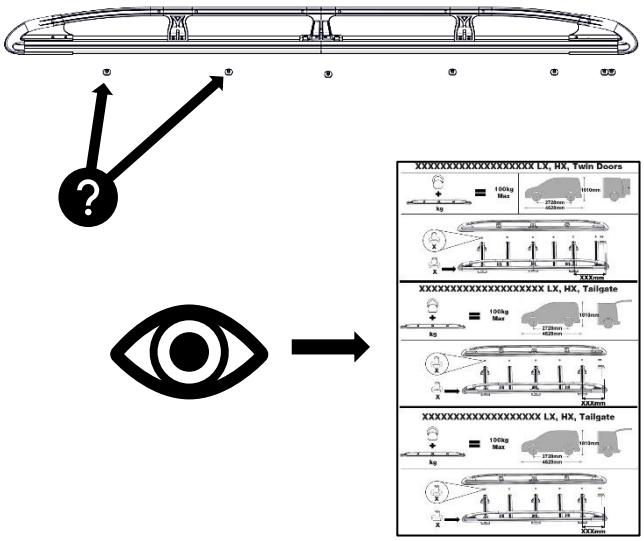



30.

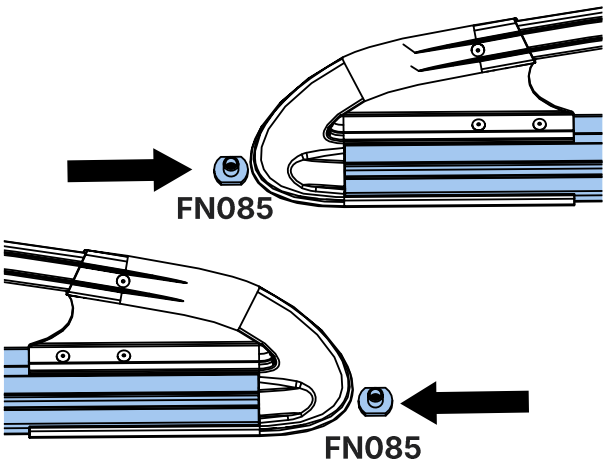



31.





32.

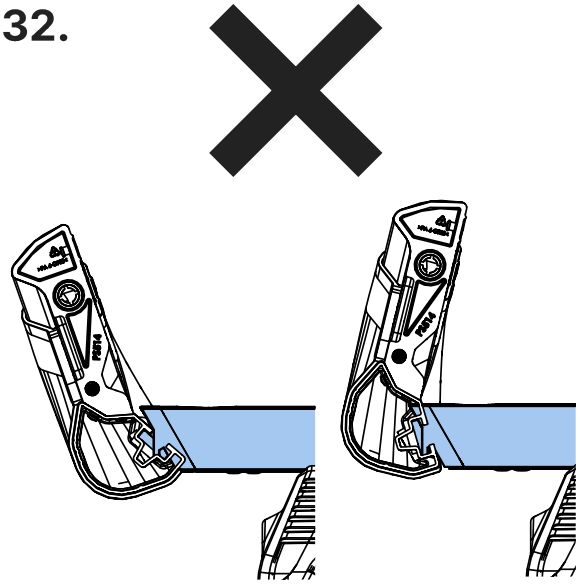


33.

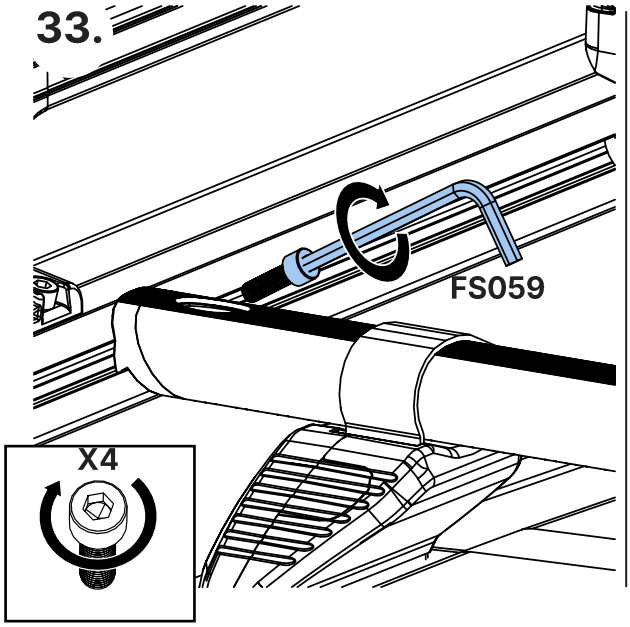



34.

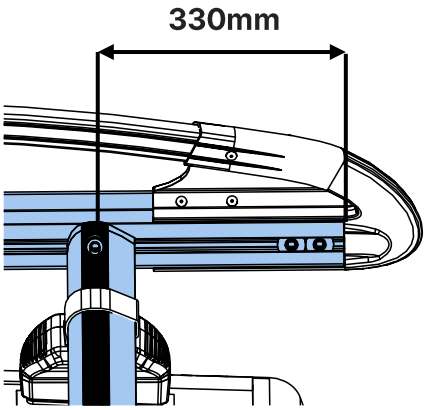


35.

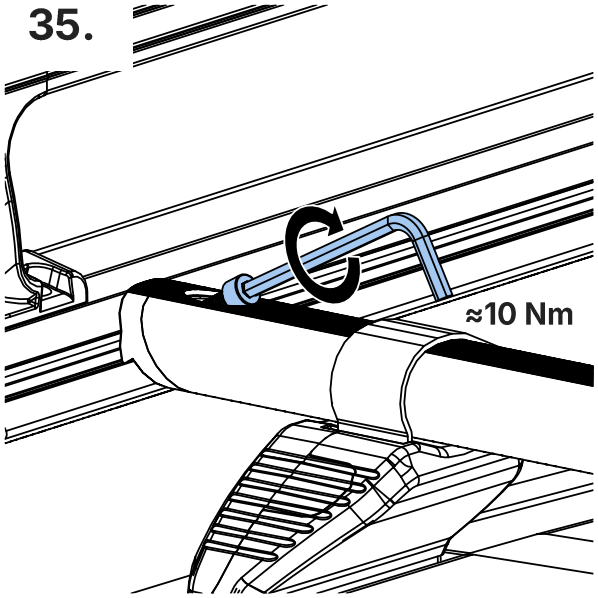



36.

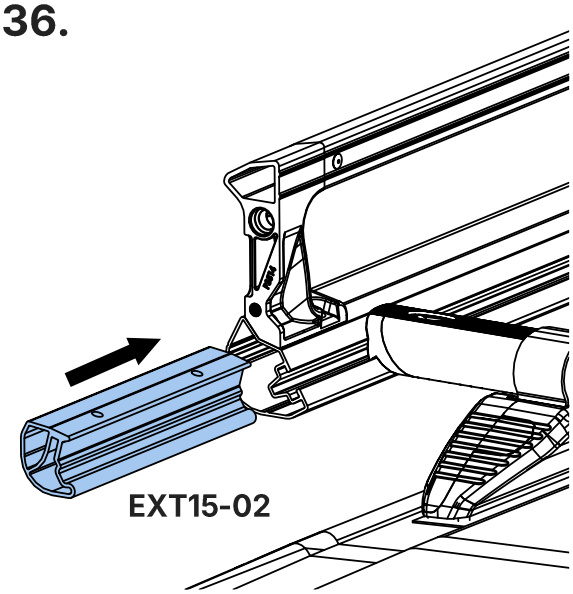



37.

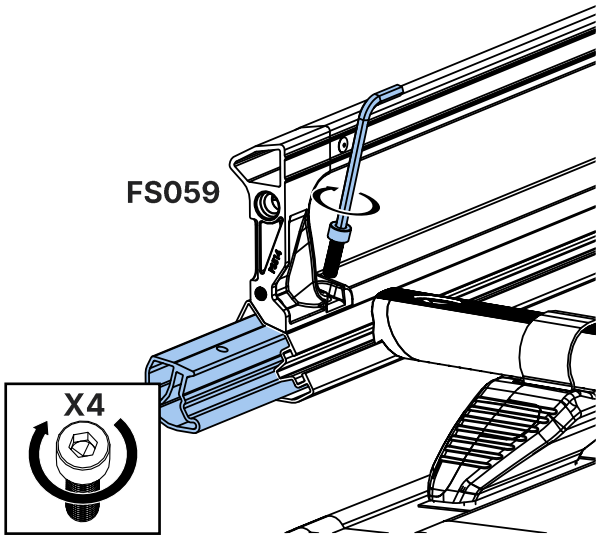



38.

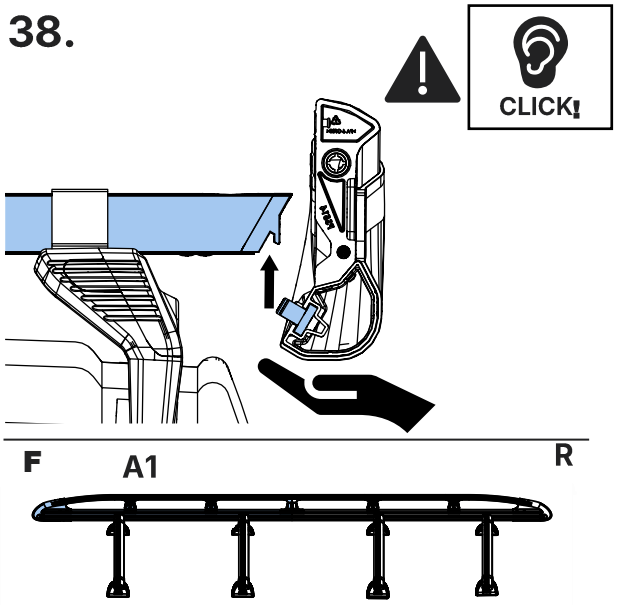



39.

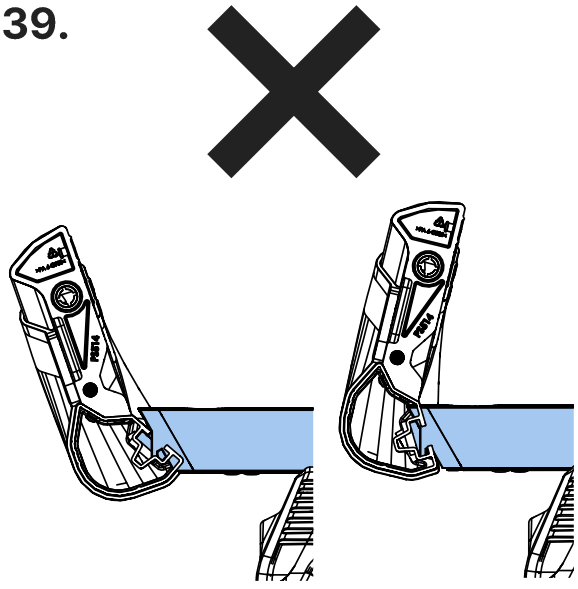


40.

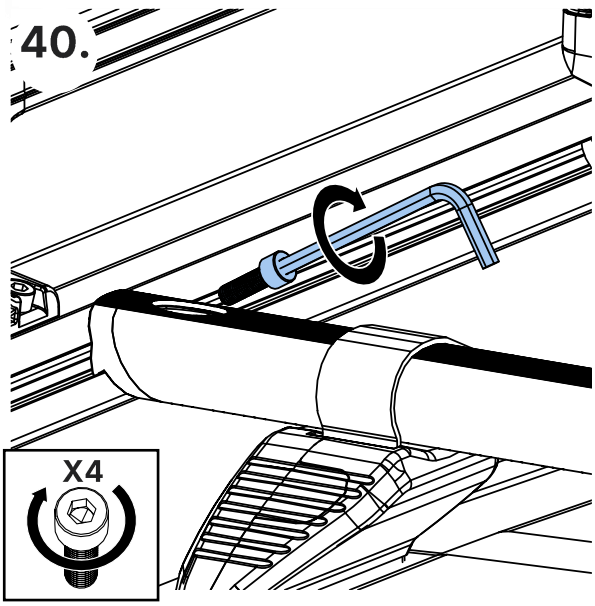


41.

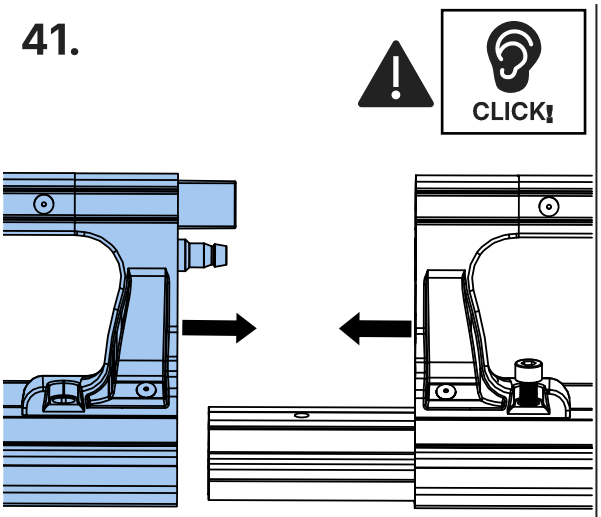



42.

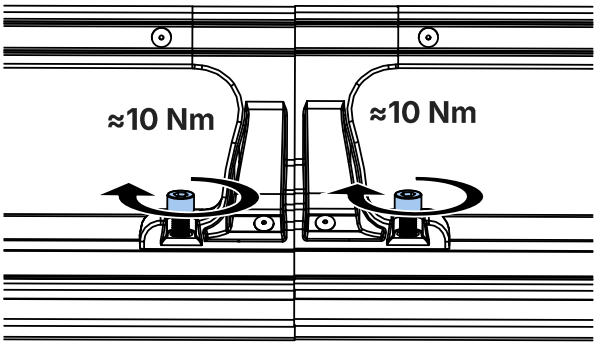



43.

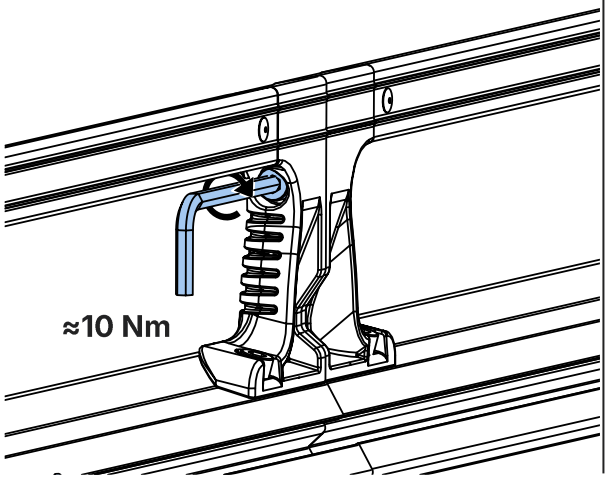



44

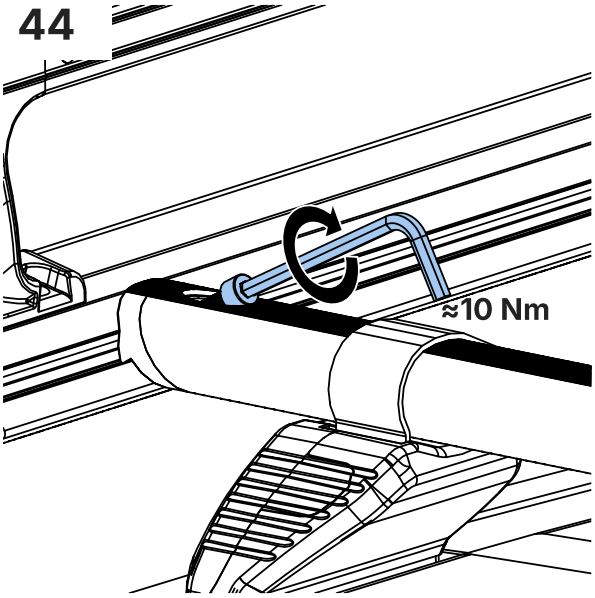



45.

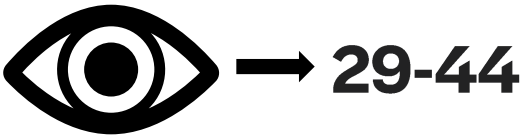


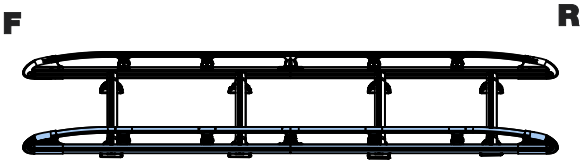



46.

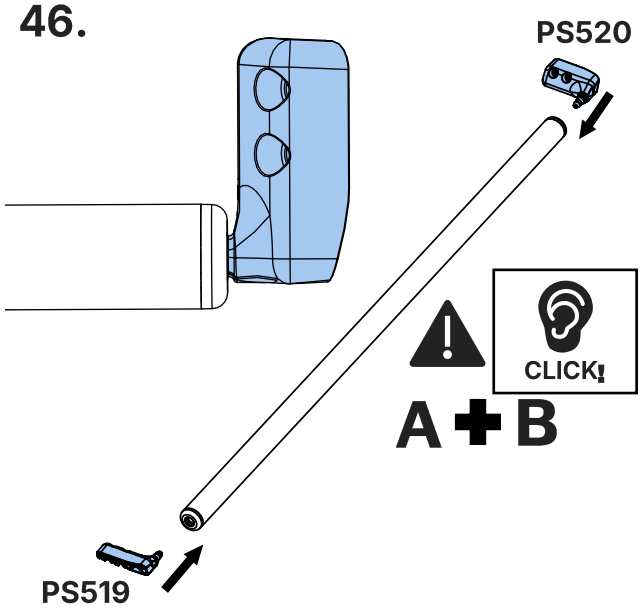


47.

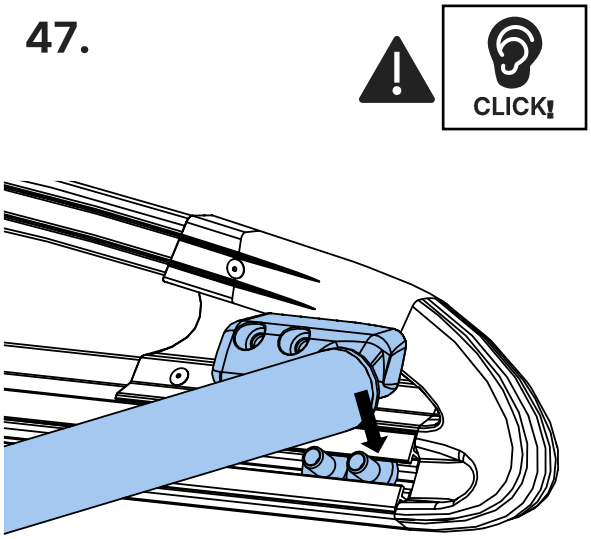



48.

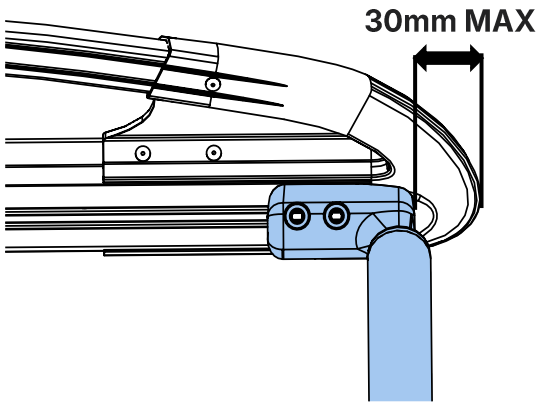



49.

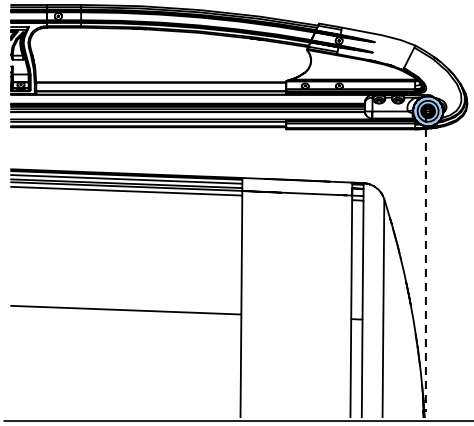


50.

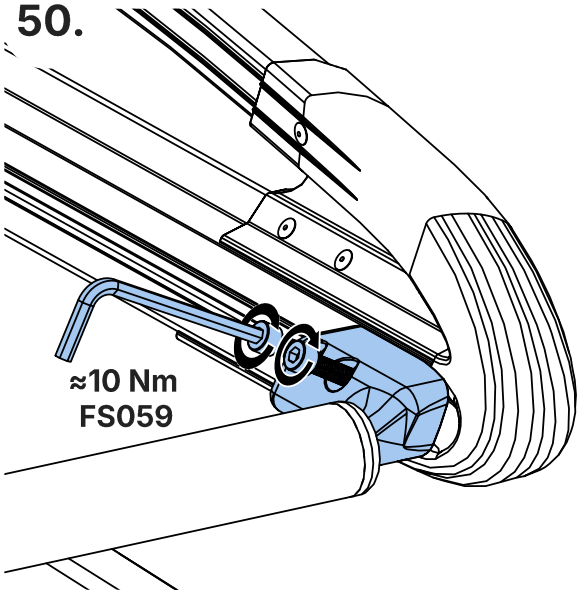



51.

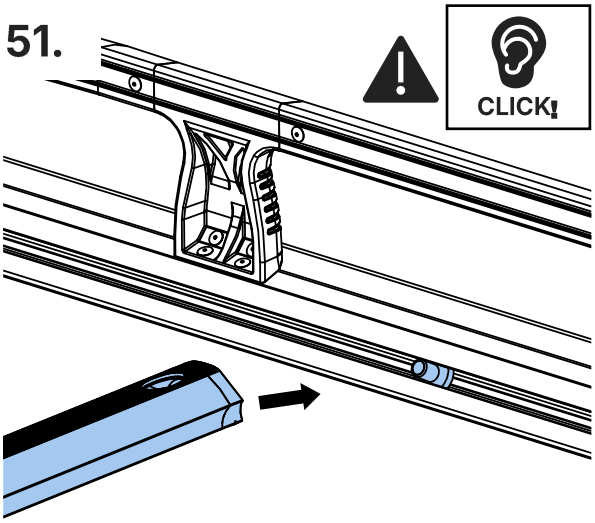



52.

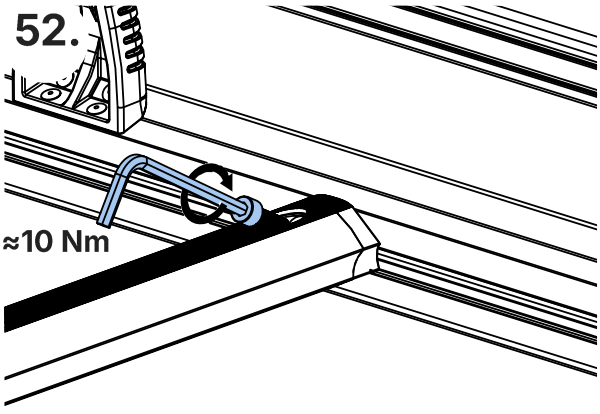


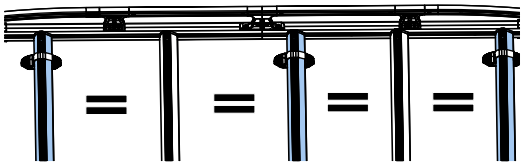53.

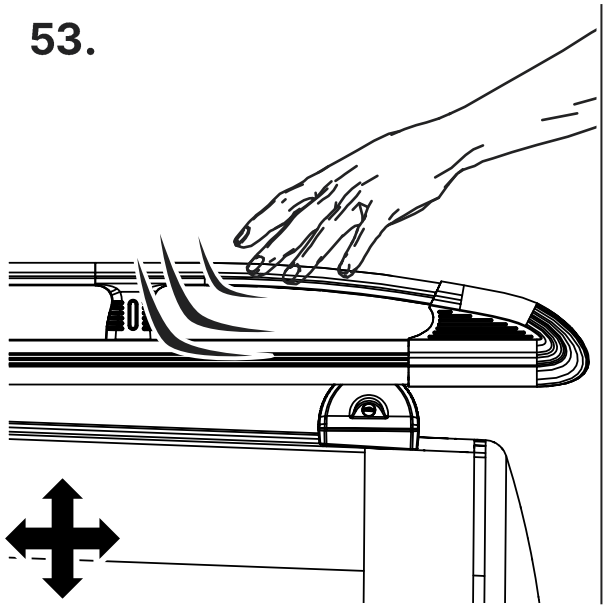

54.

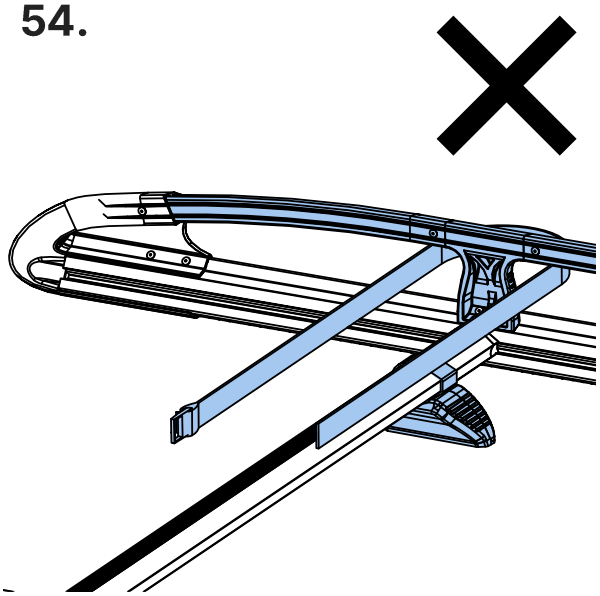

55.

